

Dear users:

Thank you for choosing TP60, we sincerely hope TP60 can bring you a pleasant experience.

### ***Index***

1, Components guide -----	1
2, Using TP60 -----	2
3, Troubleshooting -----	5
4, Precautions for daily use -----	6
5, Warranty -----	7

### ***Specification***

Output power: about  $2 \times 80W @ 4\Omega$  ,  $2 \times 50W @ 8\Omega$   
( 10%THD+N )

Distortion: 0.1%THD+N@48W/4 $\Omega$  or @27W/8 $\Omega$

Dynamic Range: 102dB


---

拓品电子 TPDZ.net  
TOPPING


# *TP60*

User's Manual

## 1, Components guide

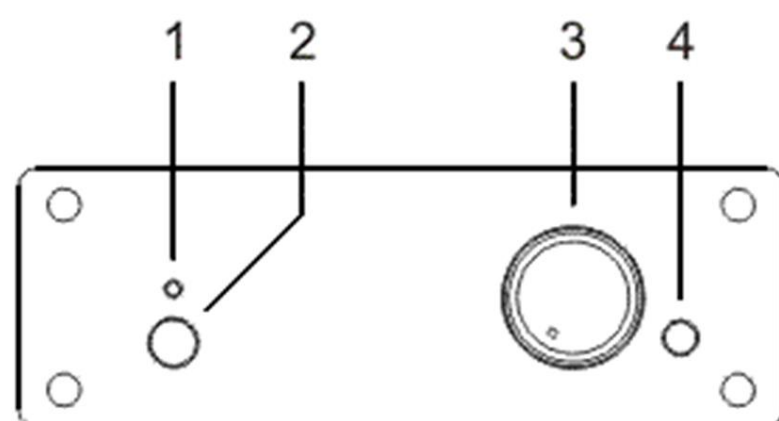


- 1, Power switch
- 2, Status LED
- 3, Volume control
- 4, Input selector switch
- 5, Input 1 (Right Channel)
- 6, Input 2 (Right Channel)

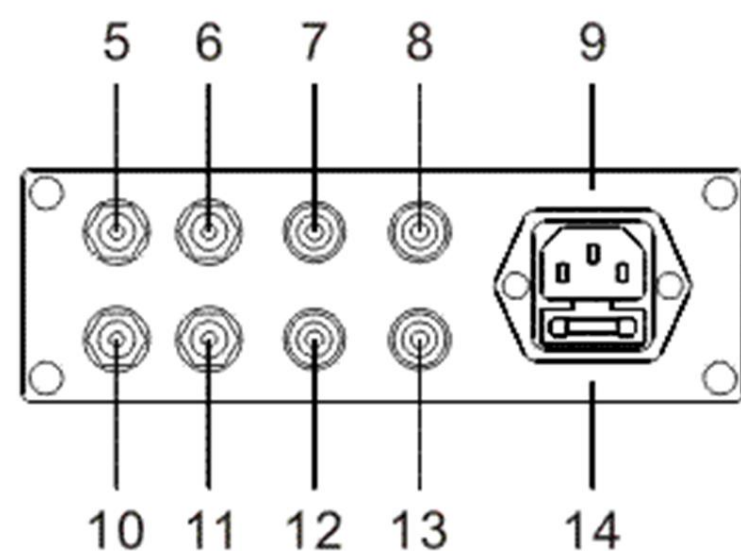

- 7, R+ output
- 8, L+ output
- 9, Power input
- 10, Input 1 (Left Channel)
- 11, Input 2 (Left Channel)
- 12, R- output
- 13, L- output
- 14, Fuse


## 2, Using TP60

TP60 support 2 RCA input, you can connect any one or both of the inputs and use the selector switch to choose the input. The MCU of TP60 will remember your last choice and select it at the next boot.

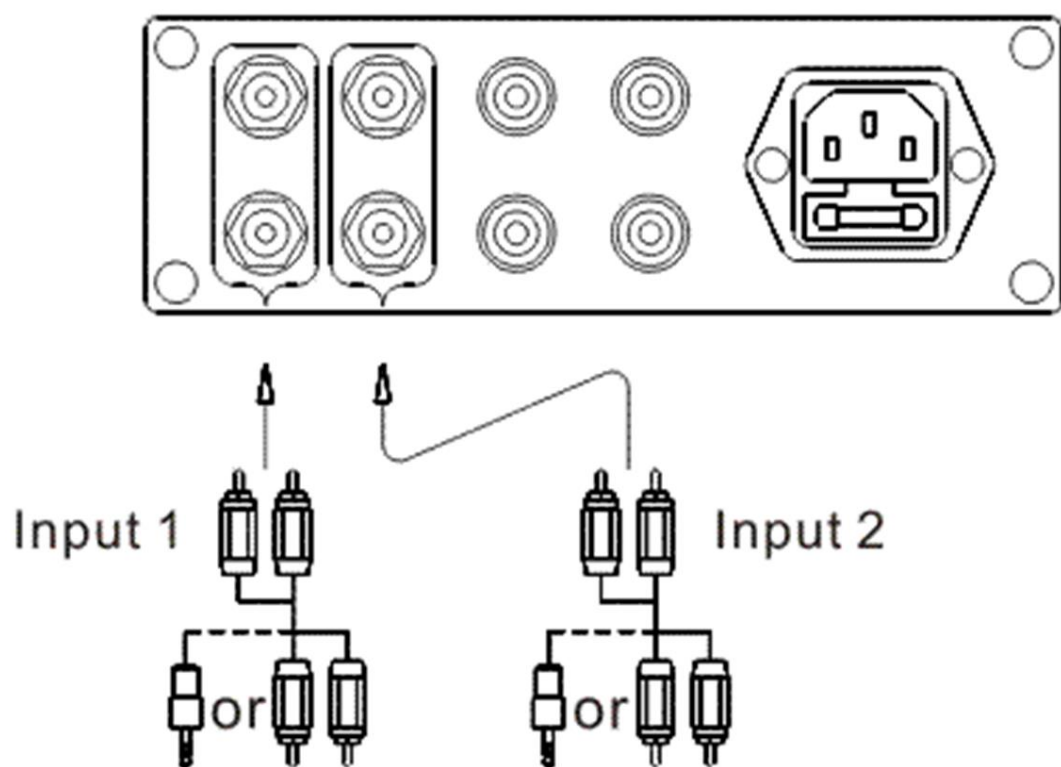


---


Left channel

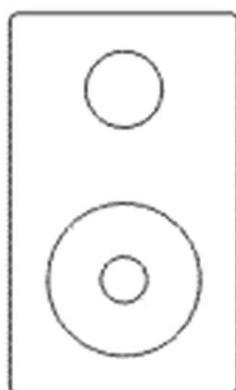


Right channel

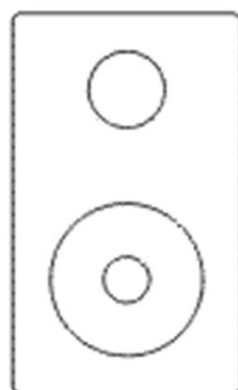


Front

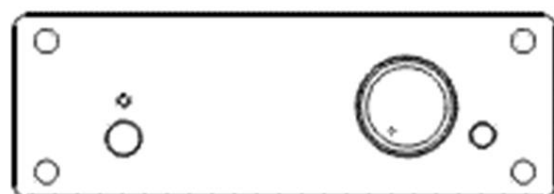


Right channel

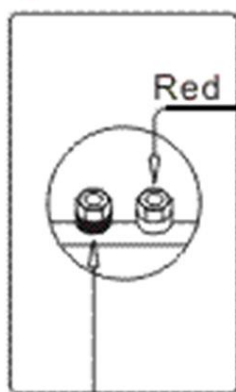

Back

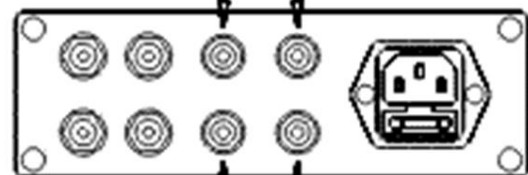

Left channel

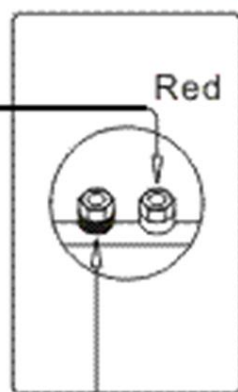

TP60's status LED has 4 status.

**1, A continued red light.**

That means TP60 is booting. According to your choose, the red light will turn green or turn blue in about 2 seconds.

**2, A continued blue light.**

TP60 is selecting input 1. You can press input selector switch to select input 2.

**3, A continued green light.**

TP60 is selecting input 2. You can press input selector switch to select input 1.

**4, A flashing red light.**

Protection of TP60 active. TP60 will now cut off all outputs. Please restart TP60.

---

### ***3, Troubleshooting***

#### **1, No sound at all, and the LED doesn't light.**

- 1.1, You forget to turn on TP60.
- 1.2, Please check the power cable.
- 1.3, Please check the fuse.

#### **2, No sound at all, but the LED lights green or blue.**

- 2.1, The volume was set to 0.
- 2.2, Please check the input cables and the output cables.

#### **3, No sound at all, but the LED lights flash red.**

- 3.1, Protection of TP60 active. Please restart TP60.

#### **4, No sound at all, but the LED lights red.**

- 4.1, TP60 is booting, please wait. If this situation continue for a long time, please restart TP60.

#### ***4, Precautions for daily use***

- 4.1, Any connections please refer page 2 and page 3.
- 4.2, Ensure the output jack, including speaker L+, L-, R+, R- do not short circuit or connect to ground.
- 4.3, When you need to connect or disconnect a cable, please turn TP60 off first.
- 4.4, You must not keep the amplifier in a hot, humid environment or drop it.
- 4.5, Opening the case instantly voids the warranty!
- 4.6, In case where liquid is spilled into the machine, turn off the power immediately and check the device inspected by a professional before further use.
- 4.7, Use only the specified voltage.
- 4.8, Maintain the volume so no distortion and will have much better listening experience.
- 4.9, Indoor use only.



---

## ***5, Warranty***

TOPPING products and accessories are to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Buyer should retain the original dated sales receipt or the warranty card. Proof of the date of purchase or the warranty card will be required with any request for warranty repair.

This warranty is void when failure is due to: damage from water, modification/alteration, unauthorized service, misuse, abuse, use with incompatible accessories, or when failure occurs outside of the one year duration of this warranty.

[www.tpdz.net](http://www.tpdz.net)

---

Please contact us at <http://www.tpdz.net/> for return instructions.